



# CRIOS Tactical Scope Cover – Installation instructions

## Installation on scope – STEP 1

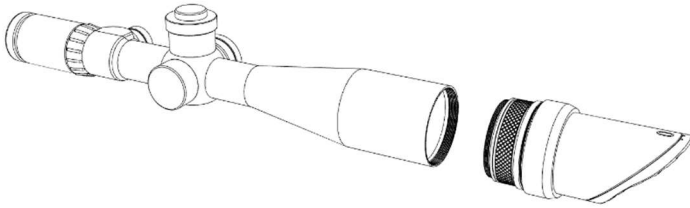


- Make sure the outer threads on the TSC correspond with the threaded portion of your scope. Check table -TSC\_Fit\_1.1- on <http://www.yorkdevelopment.nl> (subject to change)
- Check for burrs or other types of damage before installation

## Installation on scope – STEP 2

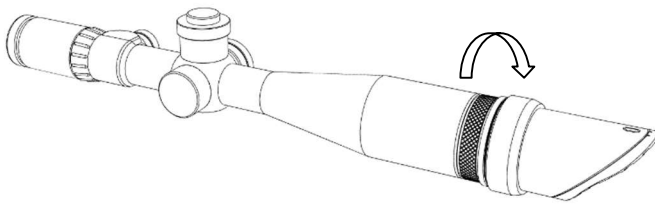

- Use the serrated portion of the TSC to tighten on the front of the scope
- **DO NOT OVERTIGHTEN TO PREVENT DAMAGE TO THE THREADS ON BOTH THE TSC AND/OR THE SCOPE**

## Installation on scope – STEP 3

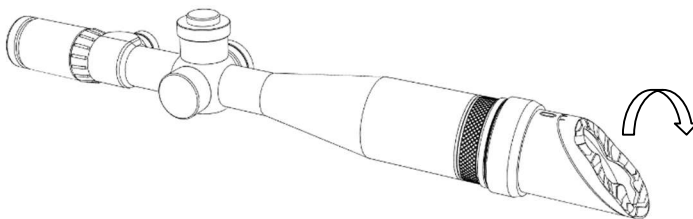

- After tightening the TSC, check if the angled portion can move freely without loosening the TSC from the scope
- If this is not the case, tighten the TSC until angled portion moves freely without loosening the TSC

## Functions

The TSC can be mounted to the front of the rifle scope and acts like a sun screen, which can be adjusted to the angle of the sun, a rain cover and has QD interchangeable front covers with an organic cutout to remove the obvious round shape of the front of the scope.


Concept & initial design:



Development & production:




## Changing front caps – STEP 1

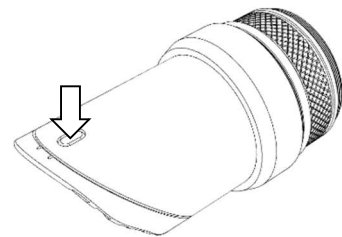


- Depress the cam (button) on the long side of the angled portion of the TSC until you feel the front cap coming loose

## Changing front caps – STEP 2

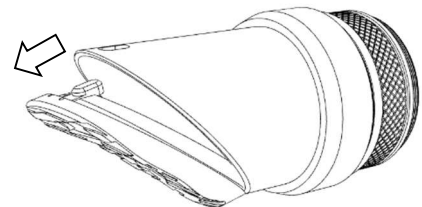

- Pivot the front cap forward and lift the other cam (button) out of the opening

## Changing front caps – STEP 2

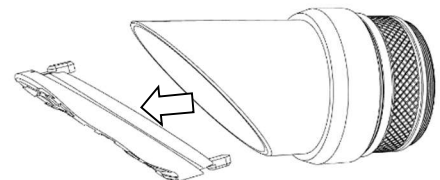

- Remove the front cap
- For installation, reverse these steps



1020.1310-01